

# Manual

## Warning

**If the saber has control box, never screw out the control box body directly**

This toy is not suitable for children under 10 years. Children under the age of 13 years should always be supervised by an adult to prevent injuries. Always act responsible, safe and respectful.

**The fight for the fate of the galaxy waits for you. Will you fight for freedom or domination? Jedi or Sith, you decide.**

**May the force be with you!!!**

## Warranty

One year

Electronics kit and empty hilt available for DIY and OEM service

## USERGUIDE

### To wake the saber:

Tap button to wake the saber. There is a short light near the bottom of the blade. Off to sleep.

### Awake mode operation:

Pressing the power button will turn the blade on and activate sounds and effects.

### When the blade is lit, the power button operates thusly:

- Tap main button- turn off the saber
- Tap second button- blaster deflection
- Hold main button- force deflection
- Hold main or second button and hit blade- saber lock-up and drag
- Hold second button and tap main button- changing colors (some fonts spin to change colors)

### When the blade is off, the power button operates thusly:

- Hold main button for 1 second and release finger- music deflection
- Tap second button select sound fonts and light features

## Features

- Strong enough for medium to heavy dueling. Has flash-on-clash effect for realistic saber duels
- Ultra loud sound volume and bright LED lights
- Removable blade: use the provided tool to loosen the screws in the hilt
- This saber has infinitely variable colors to choose from
- Removable battery (if you remove the sabers main body)
- Sensitive swing and clash sounds like a „real “ saber
- The saber have battery reverse connection, charging and discharging protection
- Playing and charging time take around 4 hours.
- Removable electronics kit, once screws got loose please use tool to tight them